

Airframe Inspection Status

Inspection	Interval	Date Last Completed	Hours Last Completed	Cycles Last Completed	Due Date
Service Check	3 Months	10/12/2022	63145	36521	1/12/2023
1A Check	6 Months	8/4/2022	63145	36521	2/4/2023
2A Check	12 Months	8/12/2022	63145	36521	8/12/2023
1C Check	24 Months	8/17/2021	62593	36145	8/17/2023
2C Check	48 Months	8/17/2021	62593	36145	8/17/2025
3C Check	72 Months	10/8/2019	61382	35376	10/8/2025
4C Check	96 Months	8/17/2021	62593	36145	8/17/2029
5C Check	120 Months	9/16/2013	56213.2	32195	9/16/2023
6C Check	144 Months	9/16/2013	56213.2	32195	9/16/2025

Service Check Tasks

Task Number	Description
24-002-01	SERVICE - SERVICE THE ENGINE CSD CASE OIL BY CHECKING FOR CORRECT LEVEL AND REPLENISHING AS REQUIRED.
24-012-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE ENGINE GENERATOR DRIVE OIL COOLER BYPASS RELIEF VALVE FOR CONDITION AND SECURITY OF INSTALLATION.
25-026-01	COMPARTMENT FLOOR PANELS, CEILING AND SIDEWALL LINERS FOR HOLES/TEARS, CONDITION AND SECURITY
27-134-01	SERVICE - SERVICE THE TRAILING EDGE FLAP BALLSCREW NUT RESERVOIR.
32-036-01	SERVICE - SERVICE THE BRAKE ACCUMULATOR PRECHARGE PRESSURE AS REQUIRED
32-038-01	INSPECT (GENERAL VISUAL) THE BRAKE ASSEMBLY.
53-852-01	COMPARTMENT.
53-868-01	ACCOMPLISH - INTERNAL - ZONAL (GV) AFT CARGO COMPARTMENT
72-002-01	FAN BLADES.
72-002-02	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE RIGHT ENGINE INLET AND FAN BLADES.
72-048-01	BLADES.
72-048-02	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE RIGHT ENGINE LPT STAGE 4 BLADES.
79-012-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE ENGINE COWLING FOR EVIDENCE OF OIL SEAL DRAIN LEAKAGE.
79-012-02	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE RIGHT ENGINE COWLING FOR EVIDENCE OF OIL SEAL DRAIN LEAKAGE.

1A Check Tasks

Task Number	Description
23-006-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE VOICE RECORDER
25-062-01 (001.1)	DISCARD NO.1 MEGAPHONE BATTERY
25-062-01 (002.1)	DISCARD NO.2 MEGAPHONE BATTERY
26-042-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE REMOTE APU CONTROL PANEL.
32-006-01	LUBRICATE - LUBRICATE THE MAIN LANDING GEAR ASSEMBLY AND ATTACHMENTS INCLUDING: EXTENSION AND RETRACTION MECHANISMS.
32-016-01	LUBRICATE - LUBRICATE THE NOSE LANDING GEAR ASSEMBLY INCLUDING: EXTENSION/RETRACTION MECHANISMS AND STEERING CONTROL COMPONENTS
32-056-01	RESTORE - RESTORE THE NOSE GEAR DOWN AND LOCKED VIEW WINDOW BY CLEANING.
32-058-01	RESTORE - RESTORE THE MAIN GEAR DOWN AND LOCKED VIEW WINDOW BY CLEANING.
33-004-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE INTERIOR EMERGENCY LIGHTS.
49-056-01	SERVICE APU OIL BY CHECKING FOR CORRECT LEVEL AND REPLENISHING AS REQUIRED.
52-076-01	LUBRICATE THE AIR STAIR SYSTEM PER THE MANUFACTURERS RECOMMENDATIONS.
52-802-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) FORWARD GALLEY SERVICE DOOR
52-806-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) FORWARD ENTRY DOOR
52-810-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) AFT ENTRY DOOR
52-816-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) AFT GALLEY SERVICE DOOR
52-842-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) FORWARD CARGO DOOR
52-846-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) AFT CARGO DOOR
53-328-01	GENERAL VISUAL INSPECTION - EXTERNAL-GENERAL VISUAL INSPECTION: INSPECT THE FORWARD AND AFT CARGO DOOR STOP PAD FITTINGS
53-334-01	GENERAL VISUAL INSPECTION - EXTERNAL-GENERAL VISUAL INSPECTION: INSPECT THE ENTRY AND GALLEY DOOR STOP PAD FITTINGS, LATCHES, AND HINGES.

2A Check Tasks

Task Number	Description
20-050-01	INSPECT (DETAILED) THE GENERATOR POWER FEEDERS, IGNITION LEADS, ELECTRIC STARTER WIRES AND CONNECTED EWIS ON THE APU. (EZAP)
21-026-01	SERVICE - SERVICE THE AIR CYCLE MACHINE OIL BY CHECKING FOR CORRECT LEVEL AND REPLENISHING AS REQUIRED.
21-028-01	SERVICE - SERVICE THE RAM AIR TURBO FAN OIL BY CHECKING FOR CORRECT LEVEL AND REPLENISHING AS REQUIRED.
21-032-01	OPERATIONALLY CHECK THE ELECTRONIC/ELECTRICAL EQUIPMENT COOLING SYSTEM ALTERNATE SUPPLY FAN/CHECK VALVE.
21-036-01	RESTORE - RESTORE THE EFIS COOLING AIR CLEANER AND THE EADI AND EHSI INLET AND OUTLET SCREENS BY CLEANING
21-042-01	RESTORE - RESTORE THE CABIN TEMPERATURE SENSOR FILTER BY CLEANING.
24-004-01	SERVICE - SERVICE THE ENGINE CSD INPUT SPLINE OIL BY CHECKING FOR CORRECT LEVEL AND REPLENISHING AS REQUIRED.
24-006-01	DISCARD - DISCARD THE ENGINE CSD LINE AND INTEGRAL OIL FILTER ELEMENTS AND CSD CASE OIL.
24-008-01	DETAILED INSPECTION - INSPECT (DETAILED) THE ENGINE CSD DRIVE LINE OIL FILTER DIFFERENTIAL PRESSURE INDICATOR
25-004-01	DETAILED INSPECTION - INSPECT (DETAILED) THE CAPTAIN, FIRST OFFICER, FIRST OBSERVER, AND SECOND OBSERVER (IF INSTALLED) SEAT HARNESSSES, CROTCH STRAPS, AND SHOULDER BELTS (AS APPLICABLE) FOR WEAR, CONDITION, AND SECURITY.
25-020-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE LAVATORY WASTE COMPARTMENT FLAPPER DOOR SPRING.
25-022-01	DETAILED INSPECTION - INSPECT (DETAILED) THE LAVATORY WASTE COMPARTMENT DOOR SEALS AND WASTE COMPARTMENT ACCESS DOOR LATCHING MECHANISM FOR WEAR, CONDITION AND SECURITY.
25-028-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE CARGO DOOR RESTRAINT SYSTEM FOR CONDITION AND SECURITY.
25-060-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE POWER MEGAPHONES
25-068-01	(GLOVES, SMOKE GOGGLES, CRASH AXE, FLASHLIGHTS AS APPLICABLE) FOR CONDITION AND PRESENCE.
25-070-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE EMERGENCY FLASHLIGHTS.
25-074-01	DETAILED INSPECTION - INSPECT (DETAILED) THE SMOKE HOODS FOR CONDITION AND PRESENCE.
26-010-01	VISUALLY CHECK - VISUALLY CHECK ENGINE FIRE BOTTLE PRESSURE GAUGE FOR CORRECT PRESSURE.
26-072-01	VISUALLY CHECK - VISUALLY CHECK THE LAVATORY FIRE EXTINGUISHING HEAT TAPE FOR CONDITION AND EXPOSURE TO HEAT.
27-038-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE STANDBY RUDDER SYSTEM.
27-142-01	LUBRICATE - LUBRICATE THE TRAILING EDGE FLAP ACTUATION COMPONENTS.
27-194-01	LUBRICATE - LUBRICATE THE LEADING EDGE SLAT ACTUATION SYSTEM.
27-195-01	LUBRICATE - LUBRICATE THE KRUEGER FLAP ACTUATION MECHANISM.
28-028-22	OPERATIONALLY CHECK THE GFI OF ALL AC FUEL TANK BOOST PUMPS.
29-006-01	DISCARD - DISCARD THE ELECTRIC MOTOR DRIVEN HYDRAULIC PUMP CASE DRAIN FILTERS
29-010-01	DISCARD THE ENGINE DRIVEN HYDRAULIC PUMP CASE DRAIN FILTERS.
29-010-02	DISCARD - DISCARD THE RIGHT ENGINE DRIVEN HYDRAULIC PUMP CASE DRAIN FILTERS.

2A Check Tasks

29-018-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE DELTA "P" INDICATION OF "A & B" HYDRAULIC SYSTEM RETURN FILTER MODULE.
32-044-01	FUNCTION CHECK - FUNCTIONALLY CHECK THE BRAKE ACCUMULATOR BLEED DOWN RATE.
33-002-01	LUBRICATE - LUBRICATE THE OUTBOARD LANDING LIGHT MECHANISM.
35-006-01	BOTTLE PRESSURE INDICATOR AND THE CONTROL COMPARTMENT FLIGHT CREW OXYGEN INDICATOR.
35-016-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE BOX STOWED FLIGHT CREW OXYGEN MASKS.
49-028-01	DETAILED INSPECTION - INSPECT (DETAILED) THE APU IGNITER PLUG.
49-030-01	INSPECT (GENERAL VISUAL) THE APU HIGH VOLTAGE LEAD (LOWER SHROUD REMOVED).
49-054-01	DISCARD - DISCARD THE APU OIL FILTER.
52-004-01	LUBRICATE - LUBRICATE THE ENTRY AND SERVICE DOOR UPPER AND LOWER HINGE GIMBALS, GUIDE PLATE AND ARM ASSEMBLIES, LATCH CRANK BEARINGS, LATCH ROLLERS, GATE HINGES, PUSH RODS, AND THE FORWARD ENTRY DOOR BODY TORQUE TUBE.
52-008-01	DETAILED INSPECTION - INSPECT (DETAILED) THE FORWARD ENTRY DOOR CENTERING GUIDE STUD AND NYLON GUIDE FOR CONDITION.
52-010-01	DETAILED INSPECTION - INSPECT (DETAILED) THE AFT ENTRY AND SERVICE DOOR CENTERING GUIDE BEARINGS (3 DOORS ONLY) FOR CONDITION.
52-074-01	LUBRICATE THE AIR STAIR DOOR SYSTEM, (INCLUDES TWO ROLLERS, AND THE CARRIAGE DRIVE BALL).
52-078-01	INSPECT (DETAILED) THE AIR STAIR SYSTEM (EXTENDED) FOR CONDITION.
54-300-01	DETAILED INSPECTION - EXTERNAL-DETAILED INSPECTION: INSPECT THE PYLON SKIN IN AREAS OF ATTACHMENT TO THE FORWARD ENGINE MOUNT BULKHEAD AT NAC. STA. 196.
54-302-01	DETAILED INSPECTION - INTERNAL-DETAILED INSPECTION: INSPECT THE PYLON UPPER LINK AND ATTACH FITTINGS AND FUSE PINS AT WBL 191, MIDSPAR CHORDS AND FORWARD TANG OF THE MID-SPAR FITTINGS AT WBL 183.4 AND 198.6 (WITH FUSE PINS INSTALLED).
54-314-01	DETAILED INSPECTION - INTERNAL-DETAILED INSPECTION: INSPECT THE PYLON MIDSPAR FITTINGS AND FUSE PINS (PYLON AND WING) AT WBL 183.4 AND 198.6 (WITH FUSE PINS INSTALLED).
71-012-01	VISUALLY CHECK - VISUALLY CHECK THE ENGINE INLET COWL (INNER AND OUTER SKIN).
72-010-01	DETAILED INSPECTION - INSPECT (DETAILED) THE ENGINE INLET AND FAN BLADES.
72-024-01	DETAILED INSPECTION - INSPECT (DETAILED) THE ENGINE INLET FOR DAMAGE AND/OR MISSING ABRADABLE MATERIAL.
79-010-01	DETAILED INSPECTION - INSPECT (DETAILED) THE ENGINE OIL SCAVENGE PARTICLE TRAPS (SCREEN AND MAGNETIC PLUG).
79-014-01	DETAILED INSPECTION - INSPECT (DETAILED) THE ENGINE OIL SCAVENGE FILTER CLOGGING INDICATOR ON THE LUBRICATION UNIT.
79-018-01	DETAILED INSPECTION - INSPECT (DETAILED) THE MAIN ENGINE OIL FILTER BYPASS INDICATOR.
80-006-01	DISCARD - DISCARD THE ENGINE STARTER OIL.
ICA-23-01	SUPPLEMENT
ICA-23-04	PERFORM VOICE RECORDER SYSTEM TEST IAW AMM TASK 23-71-00-735-000

1C Check Tasks

Task Number	Description
20-010-01	RESTORE (CLEAN) THE FORWARD LAVATORY COMPARTMENT AREAS UNDER THE TOILET AND SINK. (EZAP)
20-020-01	RESTORE (CLEAN) THE AFT LEFT LAVATORY COMPARTMENT (IF INSTALLED) AREAS UNDER THE TOILET AND SINK. (EZAP)
20-039-01	INSPECT (GENERAL VISUAL) ALL VISIBLE EWIS IN THE MAIN WHEEL WELLS. (EZAP)
20-052-01	INSPECT (DETAILED) THE EXPOSED PORTIONS OF THE CONTROL CABLES IN THE FUSELAGE AND EMPENNAGE.
20-058-01	INSPECT (DETAILED) THE EXPOSED PORTIONS OF THE LANDING GEAR MANUAL EXTENSION CONTROL CABLES.
20-072-01	INSPECT (GENERAL VISUAL) A/C GENERATOR POWER FEEDERS AND CONNECTED EWIS IN THE LEFT INBOARD LEADING EDGE. (EZAP)
20-074-01	INSPECT (GENERAL VISUAL) A/C GENERATOR POWER FEEDERS AND CONNECTED EWIS IN THE RIGHT INBOARD LEADING EDGE. (EZAP)
20-080-01	INSPECT (GENERAL VISUAL) THE EWIS AND WIRE BUNDLES CONNECTED TO THE ELEVATOR PCUS. (EZAP)
21-002-01	DISCARD - DISCARD THE RECIRCULATION SYSTEM FILTER.
21-004-01	OPERATIONAL CHECK - OPERATIONAL CHECK THE OUTFLOW VALVE, VALVE SELECTOR PANEL, OUTFLOW VALVE SELECTOR PANEL INDICATOR AND THE OUTFLOW VALVE INDICATOR FEEDBACK ASSEMBLY IN THE MANUAL MODE (MANUAL MODE FOR DIGITAL CONTROLLERS AND MANUAL AC AND DC MODE FOR ANALOG CONTROLLERS).
21-014-01	DISCARD - DISCARD THE CABIN POSITIVE PRESSURE RELIEF VALVE FILTER.
21-018-01 (001.1)	RESTORE LEFT PRIMARY HEAT EXCHANGER
21-018-01 (002.1)	RESTORE RIGHT PRIMARY HEAT EXCHANGER
21-018-01 (003.1)	RESTORE LEFT SECONDARY HEAT EXCHANGER
21-018-01 (004.1)	RESTORE RIGHT SECONDARY HEAT EXCHANGER
21-022-01	DISCARD - DISCARD THE AIR CYCLE MACHINE OIL.
21-024-01	DISCARD - DISCARD THE RAM AIR TURBOFAN OIL.
21-030-01	LUBRICATE - LUBRICATE THE RAM AIR INLET COMPONENTS AND EXHAUST LOUVERS.
21-040-01	RESTORE - RESTORE THE EQUIPMENT COOLING SYSTEM LOW FLOW SENSOR BY CLEANING.
23-008-01	FUNCTION CHECK - FUNCTIONALLY CHECK THE VOICE RECORDER FOR AUDIO FIDELITY.
23-014-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE OXYGEN MASK MICROPHONE.
24-028-01	FUNCTION CHECK - FUNCTIONALLY CHECK THE EXTERNAL POWER RECEPTACLE PINS FOR EXCESSIVE WEAR.
25-002-01	FUNCTION CHECK - FUNCTIONALLY CHECK THE HORIZONTAL ADJUSTMENT HOLES IN THE CAPTAINS AND FIRST OFFICER SEAT TRACKS FOR ELONGATION AND VERIFY THE CAPTAIN AND FIRST OFFICER SEAT TRACKS FOR WEAR, CONDITION, AND SECURITY.
25-006-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE CAPTAIN, FIRST OFFICER, AND THE FIRST OBSERVER SEAT HARNESS INERTIA REELS.
25-008-01	DETAILED INSPECTION - INSPECT (DETAILED) THE PASSENGER SEAT BELTS FOR WEAR, CONDITION, AND SECURITY WITH SEAT BELTS INSTALLED.
25-012-01	DETAILED INSPECTION - INSPECT (DETAILED) THE PASSENGER SEAT BACK RECLINE AND RECLINE RESTRICTION MECHANISMS FOR CONDITION, SECURITY, AND PROPER OPERATION.
25-014-01	DETAILED INSPECTION - INSPECT (DETAILED) THE ATTENDANT SEAT BOTTOMS FOR PROPER RETRACTION, CONDITION, AND SECURITY.

1C Check Tasks

25-016-01	DETAILED INSPECTION - INSPECT (DETAILED) THE ATTENDANT SEAT HARNESS FOR WEAR, CONDITION, AND SECURITY WITH HARNESS INSTALLED.
25-018-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE ATTENDANT SEAT HARNESS INERTIA REEL LOCK FEATURE AND THE INERTIA REEL.
25-024-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE ELECTRONIC COMPARTMENT MOISTURE SHROUDS.
25-038-01	DETAILED INSPECTION - INSPECT (DETAILED) THE EMERGENCY ESCAPE SLIDE COMPARTMENTS AND THE ESCAPE SLIDE COMPONENTS, WITHOUT REMOVING THE SLIDE, FOR SECURITY AND CONDITION.
26-002-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE LAVATORY SMOKE DETECTORS.
26-004-01	RESTORE - RESTORE THE LAVATORY SMOKE DETECTOR GRILL BY CLEANING.
26-018-01	FUNCTION CHECK - FUNCTIONALLY CHECK THE ENGINE SQUIB FIRING CIRCUIT USING THE ENGINE FIRE HANDLE SWITCH.
26-024-01	FUNCTION CHECK - FUNCTIONALLY CHECK THE ENGINE FIRE EXTINGUISHING DISTRIBUTION LINES FOR LEAKAGE AND AIRFLOW.
26-026-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE ENGINE FIRE HANDLE FOR ENGINE SHUTDOWN AND ISOLATION.
26-028-01	OVERRIDE.
26-030-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE ENGINE FIRE EXTINGUISHER DISTRIBUTION SYSTEM AND FIRE BOTTLES.
26-036-01	FUNCTION CHECK - FUNCTIONALLY CHECK THE APU SQUIB FIRING CIRCUIT USING THE APU FIRE HANDLE SWITCH.
26-038-01	OPERATIONAL CHECK APU FIRE HANDLE FOR APU SHUTDOWN AND ISOLATION.
26-040-01	OPERATIONAL CHECK - OPERATIONALLY CHECK APU REMOTE CONTROL PANEL.
26-046-01	OPERATIONAL CHECK THE APU FIRE HANDLE LOCK OVERRIDE.
26-050-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE APU FIRE EXTINGUISHER DISTRIBUTION SYSTEM AND FIRE BOTTLE.
26-060-01	OPERATIONAL CHECK THE CARGO FIRE EXTINGUISHING ARM SWITCHES TO VERIFY CIRCUITRY.
27-004-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE AILERON TRANSFER MECHANISM.
27-006-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE AILERON TRANSFER MECHANISM.
27-012-01	DETAILED INSPECTION - INSPECT (DETAILED) THE AILERON ARTIFICIAL FEEL AND CENTERING SPRINGS.
27-014-01	OPERATIONAL CHECK - OPERATIONALLY CHECK (HYDRAULIC POWER OFF) THE AILERON CONTROL SURFACES FOR FULL RANGE OF TRAVEL AND FREEDOM OF MOVEMENT.
27-018-01	LUBRICATE - LUBRICATE THE AILERON MECHANICAL CONTROL PATH.
27-026-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE AILERON SYSTEM MECHANICAL COMPONENTS FROM THE CONTROL WHEEL TO THE AILERON POWER CONTROL UNIT.
27-028-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE AILERON SYSTEM MECHANICAL COMPONENTS FROM THE POWER CONTROL UNIT TO THE AILERONS
27-030-01	DETAILED INSPECTION - INSPECT (DETAILED) THE AILERON CONTROL CABLES BETWEEN THE AILERONS AND THE POWER CONTROL UNIT.
27-032-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE FORWARD RUDDER MECHANICAL CONTROL PATH.
27-034-01	LUBRICATE - LUBRICATE THE RUDDER FEEL AND CENTERING SPRING SLIDER.

1C Check Tasks

27-040-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE STANDBY RUDDER POWER CONTROL UNIT WITH HYDRAULIC POWER ON.
27-046-01	DETAILED INSPECTION - INSPECT (DETAILED) THE STANDBY RUDDER FORE AND AFT ATTACHMENT FITTINGS AND BOLTS.
27-050-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE RUDDER TRIM THROUGH THE FULL RANGE OF TRAVEL.
27-052-01	LUBRICATE - LUBRICATE THE RUDDER MAIN POWER CONTROL UNIT ROD END AND RUDDER HINGES.
27-058-01	DETAILED INSPECTION - INSPECT (DETAILED) THE AFT RUDDER CONTROL COMPONENTS.
27-066-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE RUDDER PRESSURE REDUCER.
27-068-01	LUBRICATE - LUBRICATE THE ELEVATOR MECHANICAL CONTROL PATH.
27-070-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE ELEVATOR MECHANICAL CONTROL PATH.
27-072-01	OPERATIONAL CHECK - OPERATIONALLY CHECK (HYDRAULIC POWER OFF) THE ELEVATOR CONTROL SURFACES OVER THE FULL RANGE OF TRAVEL AND CHECK FOR FREEDOM OF MOVEMENT.
27-074-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE ELEVATOR POWER CONTROL UNITS WITH HYDRAULIC POWER ON.
27-078-01	FUNCTION CHECK - FUNCTIONALLY CHECK THE ELEVATOR PITOT-STATIC SYSTEM BY DRAINING AND LEAK CHECK.
27-080-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE ELEVATOR TAB CONTROL SYSTEM
27-082-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE ELEVATOR TAB CONTROL MECHANISM.
27-092-01	FUNCTION CHECK - FUNCTIONALLY CHECK THE STALL WARNING SYSTEM.
27-096-01	DETAILED INSPECTION - INSPECT (DETAILED) THE STABILIZER TRIM JACKSCREW INCLUDING UPPER AND LOWER GIMBALS
27-098-01	OPERATIONALLY CHECK THE STABILIZER TRIM LIMIT SWITCHES (FLAPS UP AND FLAPS DOWN).
27-100-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE CONTROL COLUMN STABILIZER TRIM CUTOUT SWITCHING MODULE.
27-102-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE STABILIZER TRIM AISLE STAND OVERRIDE SWITCH.
27-104-01	DETAILED INSPECTION - INSPECT (DETAILED) THE FORWARD STABILIZER TRIM MECHANISM RETENTION TURNBUCKLE AND TURNBUCKLE ATTACHMENT POINTS.
27-106-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE CONTROL COLUMN STABILIZER TRIM ARM AND DIRECTIONAL SWITCHES FOR MOVEMENT OF A SINGLE SWITCH TO CAUSE STABILIZER MOVEMENT.
27-108-01	LUBRICATE - LUBRICATE THE STABILIZER TRIM ACTUATOR AND ACTUATOR GIMBAL PINS.
27-112-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE STABILIZER TRIM FORWARD MECHANISM.
27-114-01	AUXILIARY BRAKE.
27-118-01	DETAILED INSPECTION - INSPECT (DETAILED) THE TRAILING EDGE FLAP CONTROL UNIT FOLLOW-UP CABLE RUN.
27-124-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE TRAILING EDGE FLAP BYPASS VALVE.
27-150-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE TRAILING EDGE FLAP TRANSMISSIONS.
27-152-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE TRAILING EDGE FLAP DRIVE TORQUE TUBES.

1C Check Tasks

27-154-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE TRAILING EDGE FLAP RIGHT ANGLE GEARBOX.
27-156-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE TRAILING EDGE FLAP LANDING GEAR BEAM ANGLE GEARBOX.
27-158-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE TRAILING EDGE FLAP FORWARD CONTROL QUADRANT.
27-160-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE TRAILING EDGE FLAP POSITION TRANSMITTER GEARBOX.
27-170-01	DETAILED INSPECTION - INSPECT (DETAILED) THE SPOILER CONTROL CABLES BETWEEN THE SPOILER MIXER AND SPOILER ACTUATORS.
27-172-01	LUBRICATE - LUBRICATE THE SPEED BRAKE LEVER BRAKE MECHANISM.
27-174-01	LUBRICATE - LUBRICATE THE GROUND AND FLIGHT SPOILER MECHANICAL CONTROL PATH INCLUDING: GROUND SPOILER ACTUATOR PILLOW BLOCKS.
27-176-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE GROUND AND FLIGHT SPOILER ACTUATORS.
27-178-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE AUTO SPEED BRAKE ELECTRIC ACTUATOR, ACTUATOR ROD END AND FORWARD ATTACHMENT POINT.
27-180-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE SPEED BRAKE REFUSED TAKEOFF SYSTEM.
27-182-01	LUBRICATE - LUBRICATE THE GROUND SPOILER INTERLOCK VALVE CABLE.
27-184-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE LEADING EDGE FLAP/SLAT ACTUATORS AND EXTENSION MECHANISMS.
27-188-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE LEADING EDGE FLAPS AND SLATS FOR UNCOMMANDED EXTENSION WITH STANDBY HYDRAULIC POWER.
27-190-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE LEADING EDGE FLAP AND SLAT ALTERNATE EXTENSION SYSTEM.
27-192-01	FUNCTION CHECK THE AUTOSLAT SYSTEM.
28-006-01	RESTORE (CLEAN) THE ENGINE FUEL FEED SYSTEM WATER SCAVENGE EJECTOR PUMP.
28-007-01	OPERATIONAL CHECK THE ENGINE SUCTION FEED SYSTEM.
28-018-01	OPERATIONAL CHECK - OPERATIONALLY (BITE) CHECK THE FUEL QUANTITY INDICATING SYSTEM.
29-012-01	DETAILED INSPECTION - INSPECT (DETAILED) THE HYDRAULIC RESERVOIR PRESSURIZATION MODULE VENT CAPS FOR CLOGGED CONDITION.
29-014-01	RESTORE - RESTORE THE HYDRAULIC RESERVOIR PRESSURIZATION MODULE FILTER BY CLEANING.
29-016-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE ELECTRIC MOTOR DRIVEN HYDRAULIC PUMP GROUND FAULT PROTECTION SYSTEM.
29-036-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE STANDBY HYDRAULIC SYSTEM.
29-042-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE HYDRAULIC POWER TRANSFER UNIT AND CONTROL SYSTEM TO INCLUDE A VISUAL CHECK OF THE CONTROL VALVE FOR PROPER POSITION.
31-004-01	USING BITE.
31-010-01	FUNCTION CHECK - FUNCTIONALLY CHECK THE CABIN ALTITUDE WARNING SWITCH.
32-002-01	SERVICE - SERVICE THE MAIN LANDING GEAR SHOCK STRUT.
32-003-01	FUNCTION CHECK - FUNCTIONALLY CHECK THE MLG TORSION LINK APEX JOINT FOR EXCESSIVE WEAR AND GAP.
32-012-01	SERVICE - SERVICE THE NOSE LANDING GEAR SHOCK STRUT.
32-015-00	INSPECT (DETAILED) NOSE LANDING GEAR AXLE.
32-024-01	FUNCTION CHECK THE LANDING GEAR MANUAL EXTENSION SYSTEM.

1C Check Tasks

32-028-01	LINKAGE.
32-030-01	DETAILED INSPECTION - INSPECT (DETAILED) THE BRAKE METERING VALVE AND LINKAGE.
32-042-01	DETAILED INSPECTION - INSPECT (DETAILED) THE PARKING BRAKE MECHANICAL CONTROL PATH.
32-053-01	INSPECT (DETAILED) OF THE NOSE WHEEL STEERING ACTUATOR AND ASSOCIATED HARDWARE.
32-054-01	DETAILED INSPECTION - INSPECT (DETAILED) THE NOSE WHEEL STEERING MECHANICAL CONTROL PATH.
32-055-01	INSPECT (DETAILED) OF THE RUDDER PEDAL STEERING INTERCONNECT MECHANICAL CONTROL PATH.
32-804-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) LEFT MAIN LANDING GEAR AND LANDING GEAR DOORS
32-808-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) RIGHT MAIN LANDING GEAR AND LANDING GEAR DOORS (EZAP)
33-006-01	FUNCTION CHECK - FUNCTIONALLY CHECK THE SELF-ILLUMINATING EXIT SIGNS (DISCARD WHEN ILLUMINATION IS BELOW REQUIRED MINIMUM).
33-008-01	OPERATIONAL CHECK - OPERATIONALLY CHECK EMERGENCY LIGHTS USING FLIGHT DECK AND ATTENDANT PANEL SWITCHES.
33-010-01	FUNCTION CHECK - FUNCTIONALLY CHECK EMERGENCY LIGHT BATTERY PACKS FOR CAPACITY (15 MINUTES) AND ONE DEEP CYCLE.
34-002-01	DETAILED INSPECTION - INSPECT (DETAILED) THE PITOT PROBES AND STATIC PORTS.
34-004-01	SERVICE - SERVICE THE PITOT STATIC SYSTEM BY DRAINING WATER ACCUMULATION FROM THE DRAIN FITTINGS.
34-006-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE EFIS TRANSFER SWITCH.
35-012-01	OPERATIONAL CHECK - OPERATIONALLY CHECK EACH FLIGHT CREW OXYGEN MASK/REGULATOR (APPLICABLE TO OUT OF THE BOX ASSEMBLY).
38-002-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE FORWARD POTABLE WATER DRAIN VALVE FOR EVIDENCE OF LEAKAGE.
49-002-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE VISIBLE PORTIONS OF THE UPPER & LOWER APU SHROUDS & THE LOCK HANDLE ASSEMBLY.
49-004-01	ASSEMBLY.
49-006-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE APU DRAIN ASSEMBLY FOR OBSTRUCTIONS/DEBRIS.ALSO INSPECT THE DRAIN CUP, RESERVOIR & STANDPIPE ASSEMBLY IF INSTALLED.
49-014-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE APU INTAKE DOOR AND ATTACHMENTS.
49-020-01	INSPECT (GENERAL VISUAL) THE VISIBLE PORTIONS OF THE APU COMPRESSOR PLENUM, COMPRESSOR INLET ASSEMBLY, AND TURBINE PLENUM (LOWER SHROUD REMOVED).
49-022-01	INSPECT (GENERAL VISUAL) THE VISIBLE PORTIONS OF THE APU GEARBOX ASSEMBLY (LOWER SHROUD REMOVED).
49-024-01	DISCARD - DISCARD THE APU HIGH PRESSURE FUEL FILTER ASSEMBLY.
49-026-01	DISCARD - DISCARD THE APU LOW PRESSURE FUEL FILTER ASSEMBLY.
49-040-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE APU COOLING AIR SHUT-OFF VALVE.
49-042-01	DISCARD THE APU PRESSURE REGULATOR AIR FILTER (LOWER SHROUD REMOVED).
49-046-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE APU EXHAUST AFT FAIRING ASSEMBLY COOLING AIR INTAKE.

1C Check Tasks

49-048-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE APU EXHAUST HEAT SHIELD ASSEMBLY. ALSO INSPECT THE DUCT ALIGNMENT ASSEMBLY IF INSTALLED.
49-050-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE APU EXHAUST DRIP PAN ASSEMBLY AND EXHAUST DUCT MUFFLER/FELT LINER ASSEMBLY. ALSO INSPECT THE BONDING JUMPERS IF INSTALLED.
49-052-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE APU OIL TANK.
52-002-01	AND TORQUE TUBE HANDLE BOX BEARINGS (ALL 4 DOORS), AND THE FORWARD ENTRY DOOR STOP RODS.
52-036-01	LUBRICATE THE OVER WING EMERGENCY EXIT HATCH ROLLERS AND PIVOT FITTINGS.
52-048-01	LUBRICATE - LUBRICATE THE CARGO COMPARTMENT DOOR LATCH TUBE BEARINGS.
52-050-01	LUBRICATE - LUBRICATE THE CARGO COMPARTMENT DOOR COUNTERBALANCE MAIN BEARING.
52-068-01	LUBRICATE - LUBRICATE THE E/E ACCESS DOOR HANDLE LATCHING MECHANISM (RACK AND PINION GEAR AND THE LOCK PINS).
52-070-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE E/E ACCESS DOOR PRESSURE SEAL FOR DEGRADATION.
52-080-01	INSPECT (GENERAL VISUAL) THE AIRSTAIR DOOR PRESSURE SEAL FOR DEGRADATION.
52-304-01	GENERAL VISUAL INSPECTION - EXTERNAL-GENERAL VISUAL INSPECTION: INSPECT THE FORWARD AND AFT CARGO DOOR SKINS AND EDGE FRAMES.
52-310-01	GENERAL VISUAL INSPECTION - EXTERNAL-GENERAL VISUAL INSPECTION: INSPECT THE ENTRY AND GALLEY SERVICE DOOR SKINS AND EDGE FRAMES.
52-322-01	GENERAL VISUAL INSPECTION - EXTERNAL-GENERAL VISUAL INSPECTION: INSPECT THE OVER WING ESCAPE HATCH SKIN, EDGE FRAMES.
52-326-01	GENERAL VISUAL INSPECTION - EXTERNAL-GENERAL VISUAL INSPECTION: INSPECT THE FORWARD ACCESS DOOR AND ELECTRICAL/ELECTRONIC ACCESS DOOR SKIN AND EDGE FRAMES.
52-804-01	ACCOMPLISH - INTERNAL - ZONAL (GV) FORWARD GALLEY SERVICE DOOR
52-808-01	ACCOMPLISH - INTERNAL - ZONAL (GV) FORWARD ENTRY DOOR
52-812-01	ACCOMPLISH - INTERNAL - ZONAL (GV) AFT ENTRY DOOR
52-818-01	ACCOMPLISH - INTERNAL - ZONAL (GV) AFT GALLEY SERVICE DOOR
52-820-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) RIGHT EMERGENCY EXIT HATCH
52-824-01	PERFORM AN EXTERNAL ZONAL INSPECTION (GV) OF THE RIGHT EMERGENCY EXIT HATCH.
52-828-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) LEFT EMERGENCY EXIT HATCH
52-836-01	PERFORM AN EXTERNAL ZONAL INSPECTION (GV) OF THE LEFT EMERGENCY EXIT HATCH.
52-844-01	ACCOMPLISH - INTERNAL - ZONAL (GV) FORWARD CARGO DOOR
52-848-01	ACCOMPLISH - INTERNAL - ZONAL (GV) AFT CARGO DOOR
53-300-01	GENERAL VISUAL INSPECTION - EXTERNAL-GENERAL VISUAL INSPECTION: INSPECT THE EXTERIOR SURFACE OF THE FUSELAGE FROM BS 178 TO BS 1217 AND LANDING GEAR BAYS INCLUDING SKIN PANELS AND SKIN SPLICES, CUT-OUTS, FORWARD FACE OF THE FORWARD PRESSURE BULKHEAD AT BS 178, LOWER SURFACE OF THE PRESSURE DECK FROM BS 663.75 TO BS 727, BS 663.75 AND BS 727 BULKHEADS, THE EXTERIOR OF THE KEEL BEAM FROM BS 663.75 TO BS 727, AND LANDING GEAR SUPPORT STRUCTURE.
53-306-01	GENERAL VISUAL INSPECTION INTERNAL: INSPECT THE AREAS UNDER GALLEYS AND LAVATORIES. A DUAL COAT OF CORROSION INHIBITOR PER PARAGRAPH 6 OF THE BASIC TASK PER MRB D6-82981-MRBR, SECTION 3.F., IS RECOMMENDED FOR THIS AREA (OPTIONAL).

1C Check Tasks

53-330-01	DETAILED INSPECTION - EXTERNAL-DETAILED INSPECTION: INSPECT THE FORWARD AND AFT CARGO DOOR STOP PAD FITTINGS.
53-338-01	DETAILED INSPECTION - EXTERNAL-DETAILED INSPECTION: INSPECT THE ENTRY AND GALLEY SERVICE DOOR SURROUND STRUCTURE INCLUDING DOOR STOP PAD FITTINGS, LATCHES, AND HINGES.
53-352-01	GENERAL VISUAL INSPECTION - EXTERNAL-GENERAL VISUAL INSPECTION: INSPECT STRINGER 18A WEB, CHORD AND LINKS.
53-354-01	GENERAL VISUAL INSPECTION - EXTERNAL-GENERAL VISUAL INSPECTION: INSPECT TRUNNION BEAM SUPPORT FRAME, STA. 706.
53-356-01	GENERAL VISUAL INSPECTION - EXTERNAL-GENERAL VISUAL INSPECTION: INSPECT THE LOWER FRAME, STA. 695.
53-360-01	GENERAL VISUAL INSPECTION - EXTERNAL-GENERAL VISUAL INSPECTION: INSPECT THE SIDE STRUT SUPPORT FRAME, STA. 685.
53-362-01	GENERAL VISUAL INSPECTION - EXTERNAL-GENERAL VISUAL INSPECTION: INSPECT THE PRESSURE DECK ATTACHMENT-TO-REAR SPAR EXTENSION.
53-364-01	GENERAL VISUAL INSPECTION - EXTERNAL-GENERAL VISUAL INSPECTION: INSPECT THE FLAP TRACK FITTINGS.
53-366-01	GENERAL VISUAL INSPECTION - EXTERNAL-GENERAL VISUAL INSPECTION: INSPECT THE UPPER DOOR SKIN PANEL, STA. 888 TO 1016 (STR. 4-14).
53-368-01	GENERAL VISUAL INSPECTION - EXTERNAL-GENERAL VISUAL INSPECTION: INSPECT THE LOWER DOOR SKIN PANEL, STA. 888 TO 1016 (STR. 14-24).
53-800-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) FLIGHT COMPARTMENT
53-802-01	ACCOMPLISH - INTERNAL - ZONAL (GV) FLIGHT COMPARTMENT
53-806-01	ACCOMPLISH - INTERNAL - ZONAL (GV) - FORWARD LAVATORY (IF INSTALLED) (EZAP)
53-808-01	ACCOMPLISH - INTERNAL - ZONAL (GV) FORWARD GALLEY
53-810-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) FORWARD HALF OF CABIN - AFT OF CONTROL CABIN TO BS 627.5
53-812-01	ACCOMPLISH - INTERNAL - ZONAL (GV) FORWARD HALF OF CABIN - AFT OF CONTROL CABIN TO BS 627.5
53-816-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) AFT HALF OF CABIN - BS 627.5 TO AFT BULKHEAD
53-818-01	ACCOMPLISH - INTERNAL - ZONAL (GV) AFT HALF OF CABIN - BS 627.5 TO AFT BULKHEAD
53-822-01	ACCOMPLISH - INTERNAL - ZONAL (GV) AFT GALLEY
53-824-01	PERFORM AN INTERNAL ZONAL INSPECTION (GV) OF THE AFT LAVATORY. (EZAP)
53-828-01	PERFORM AN INTERNAL ZONAL INSPECTION (GV) OF THE AFT LEFT LAVATORY. (EZAP)
53-832-01	PERFORM AN INTERNAL ZONAL INSPECTION (GV) OF THE AFT RIGHT LAVATORY. (EZAP)
53-838-01	ACCOMPLISH - INTERNAL - ZONAL (GV) RADOME
53-840-01	ACCOMPLISH - INTERNAL - ZONAL (GV) LOWER NOSE COMPARTMENT (EZAP)
53-844-01	ACCOMPLISH - INTERNAL - ZONAL (GV) ELECTRICAL COMPARTMENT (EZAP)
53-846-01	ACCOMPLISH - INTERNAL - ZONAL (GV) ELECTRICAL COMPARTMENT ACCESS DOOR
53-848-01	ACCOMPLISH - INTERNAL - ZONAL (GV) FORWARD AIRSTAIR COMPARTMENT (EZAP)
53-858-01	ACCOMPLISH - INTERNAL - ZONAL (GV) AIR CONDITIONING DISTRIBUTION BAY (EZAP)
53-860-01	ACCOMPLISH - INTERNAL - ZONAL (GV) RAM AIR DUCT (EZAP)
53-862-01	ACCOMPLISH - INTERNAL - ZONAL (GV) AIR CONDITIONING EQUIPMENT BAY (EZAP)
53-864-01	ACCOMPLISH - INTERNAL - ZONAL (GV) KEEL BEAM (EZAP)

1C Check Tasks

53-874-01	BAY (EZAP)
53-888-01	ACCOMPLISH - INTERNAL - ZONAL (GV) TAIL COMPARTMENT - AREA AFT OF PRESSURE BULKHEAD AND ABOVE APU COMPARTMENT (EZAP)
53-890-01	ACCOMPLISH - INTERNAL - ZONAL (GV) APU COMPARTMENT (EZAP)
53-892-01	ACCOMPLISH - INTERNAL - ZONAL (GV) TAIL CONE (EZAP)
54-804-01	ACCOMPLISH - INTERNAL - ZONAL (GV) FORWARD STRUT FAIRING - ENGINE NO. 1
54-806-01	ACCOMPLISH - INTERNAL - ZONAL (GV) FAN COWL SUPPORT BEAM - ENGINE NO. 1
54-808-01	ACCOMPLISH - INTERNAL - ZONAL (GV) STRUT TORQUE BOX - ENGINE NO. 1 (EZAP)
54-810-01	ACCOMPLISH - INTERNAL - ZONAL (GV) AFT STRUT FAIRING - ENGINE NO. 1 (EZAP)
54-812-01	ACCOMPLISH - INTERNAL - ZONAL (GV) FORWARD STRUT FAIRING - ENGINE NO. 2
54-814-01	ACCOMPLISH - INTERNAL - ZONAL (GV) FAN COWL SUPPORT BEAM - ENGINE NO. 2
54-816-01	ACCOMPLISH - INTERNAL - ZONAL (GV) STRUT TORQUE BOX - ENGINE NO. 2 (EZAP)
54-818-01	ACCOMPLISH - INTERNAL - ZONAL (GV) AFT STRUT FAIRING - ENGINE NO. 2 (EZAP)
55-306-01	GENERAL VISUAL INSPECTION - EXTERNAL-GENERAL VISUAL INSPECTION: INSPECT THE HORIZONTAL STABILIZER EXTERNAL SURFACES INCLUDING SKINS, ELEVATORS, TRAILING EDGE BEAMS AND PANELS.
55-320-01	GENERAL VISUAL INSPECTION - EXTERNAL-GENERAL VISUAL INSPECTION: INSPECT THE VERTICAL STABILIZER EXTERIOR SURFACE INCLUDING SKINS, TRAILING EDGE PANELS, AND RUDDER.
55-802-01	ACCOMPLISH - INTERNAL - ZONAL (GV) VERTICAL STABILIZER (EZAP)
55-804-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) VERTICAL STABILIZER
55-808-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) VERTICAL STABILIZER TIP
55-810-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) RUDDER
55-812-01	ACCOMPLISH - INTERNAL - ZONAL (GV) HORIZONTAL STABILIZER - LEFT
55-814-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) HORIZONTAL STABILIZER- LEFT
55-816-01	ACCOMPLISH - INTERNAL - ZONAL (GV) HORIZONTAL STABILIZER - RIGHT
55-818-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) HORIZONTAL STABILIZER - RIGHT
55-820-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) HORIZONTAL STABILIZER - ELEVATOR - LEFT
55-822-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) HORIZONTAL STABILIZER - ELEVATOR - RIGHT
56-002-01	LUBRICATE - LUBRICATE THE INSIDE MECHANISMS OF THE PILOTS AND CO-PILOTS #2 SLIDING WINDOWS
56-004-01	LUBRICATE - LUBRICATE THE EXTERNAL RELEASE MECHANISM OF THE CO-PILOTS #2 SLIDING WINDOW.
56-006-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE INSIDE RELEASE MECHANISMS FOR THE PILOTS AND COPILOTS #2 SLIDING WINDOWS AND OPERATIONALLY CHECK THE CO-PILOTS #2 SLIDING WINDOW FROM THE OUTSIDE.
56-010-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE PILOTS AND CO-PILOTS #2 SLIDING WINDOW SILL DRAIN FOR OBVIOUS DAMAGE, CLOGGING, CONDITION, AND SECURITY.
57-308-01	DETAILED INSPECTION - INTERNAL-DETAILED INSPECTION: INSPECT THE EXTERNAL WING SKIN SURFACE AROUND FLAP TRACK ATTACH POINTS.

1C Check Tasks

57-334-01	GENERAL VISUAL INSPECTION - INTERNAL-GENERAL VISUAL INSPECTION: INSPECT THE MAIN FLAP TRACKS, AND FORWARD AND REAR SPAR ATTACH FITTINGS.
57-340-01	GENERAL VISUAL INSPECTION - INTERNAL-GENERAL VISUAL INSPECTION: INSPECT THE MAIN LANDING GEAR BEAM INBOARD SUPPORT LINK.
57-802-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) LEFT WING TIP
57-806-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) OUTBOARD LEADING EDGE INCLUDING SLATS - LEFT WING
57-808-01	PERFORM AN INTERNAL ZONAL INSPECTION (GV) OF THE LEFT WING OUTBOARD LEADING EDGE. (EZAP)
57-810-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) INBOARD LEADING EDGE INCLUDING KRUEGER FLAPS - LEFT WING
57-812-01	ACCOMPLISH - INTERNAL - ZONAL (GV) INBOARD LEADING EDGE INCLUDING KRUEGER FLAPS - LEFT WING (FLAPS DEPLOYED) (EZAP)
57-814-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) FUEL VENT SURGE TANK - LEFT WING
57-818-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) MAIN FUEL TANK - LEFT WING
57-822-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) WING TRAILING EDGE, AILERON AND CONTROL TAB - LEFT WING
57-824-01	ACCOMPLISH - INTERNAL - ZONAL (GV) WING TRAILING EDGE, AILERON AND CONTROL TAB (AILERON CONTROL AREA ONLY) - LEFT WING
57-828-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) WING TRAILING EDGE, OUTBOARD FLAP AND SPOILERS - LEFT WING
57-830-01	ACCOMPLISH - INTERNAL - ZONAL (GV) WING TRAILING EDGE, OUTBOARD FLAP AND SPOILERS - LEFT WING
57-834-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) WING FIXED TRAILING EDGE BETWEEN FLAPS - LEFT WING
57-838-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) WING TRAILING EDGE INBOARD FLAP AND SPOILERS AND REAR SPAR TO LANDING GEAR SUPPORT BEAM - LEFT WING
57-840-01	ACCOMPLISH - INTERNAL - ZONAL (GV) WING TRAILING EDGE INBOARD FLAP AND SPOILERS - LEFT WING
57-846-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) RIGHT WING TIP
57-850-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) OUTBOARD LEADING EDGE INCLUDING SLATS - RIGHT WING
57-852-01	ACCOMPLISH - INTERNAL - ZONAL (GV) OUTBOARD LEADING EDGE - RIGHT WING (SLATS DEPLOYED - REMOVAL OF INTERNAL SLAT PANELS NOT REQUIRED). (EZAP)
57-854-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) INBOARD LEADING EDGE INCLUDING KRUEGER FLAPS - RIGHT WING
57-856-01	PERFORM AN INTERNAL ZONAL INSPECTION (GV) OF THE RIGHT WING INBOARD LEADING EDGE INCLUDING KRUEGER FLAPS (EZAP).
57-858-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) FUEL VENT SURGE TANK - RIGHT WING
57-862-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) MAIN FUEL TANK - RIGHT WING
57-866-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) WING TRAILING EDGE, AILERON AND CONTROL TAB - RIGHT WING
57-868-01	ACCOMPLISH - INTERNAL - ZONAL (GV) WING TRAILING EDGE, AILERON AND CONTROL TAB (AILERON CONTROL AREA ONLY) - RIGHT WING
57-872-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) WING TRAILING EDGE, OUTBOARD FLAP AND SPOILERS - RIGHT WING
57-874-01	ACCOMPLISH - INTERNAL - ZONAL (GV) WING TRAILING EDGE, OUTBOARD FLAP AND SPOILERS - RIGHT WING
57-878-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) WING FIXED TRAILING EDGE BETWEEN FLAPS - RIGHT WING

1C Check Tasks

57-882-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) WING TRAILING EDGE INBOARD FLAP AND SPOILERS AND REAR SPAR TO LANDING GEAR SUPPORT BEAM - RIGHT WING
57-884-01	ACCOMPLISH - INTERNAL - ZONAL (GV) WING TRAILING EDGE INBOARD FLAP AND SPOILERS - RIGHT WING
70-826-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) THRUST REVERSER - ENGINE NO. 1 (THRUST REVERSER IN STOWED AND DEPLOYED POSITION) (EZAP)
70-828-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) THRUST REVERSER - ENGINE NO. 1 (INNER AND OUTER EXTERIOR SURFACES)
70-830-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) ENGINE NO. 1 (EZAP)
70-838-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) THRUST REVERSER - ENGINE NO. 2 (THRUST REVERSER IN STOWED AND DEPLOYED POSITION) (EZAP)
70-840-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) THRUST REVERSER - ENGINE NO. 2 (INNER AND OUTER EXTERIOR SURFACES)
70-842-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) ENGINE NO. 2 (EZAP)
71-016-01	FUNCTION CHECK - FUNCTIONAL CHECK OF THE STRUT DRAINS FOR BLOCKAGE.
72-026-01	DETAILED INSPECTION - INSPECT (DETAILED) THE FORWARD ENGINE MOUNT ATTACHMENT FOR SECURITY, MISSING OR LOOSE BOLTS, DEFORMATION, AND GAPS AT CONNECTING JOINTS.
72-050-01	DETAILED INSPECTION - INSPECT (DETAILED) THE AFT ENGINE MOUNT LUGS FOR STRUCTURAL INTEGRITY AND DEFORMATION.
73-006-01	DISCARD THE ENGINE FUEL FILTER CARTRIDGE (ELEMENT).
74-008-01	DETAILED INSPECTION - INSPECT (DETAILED) THE ENGINE IGNITER PLUGS.
74-010-01	DETAILED INSPECTION - INSPECT (DETAILED) THE ENGINE IGNITION LEADS.
76-002-01	DETAILED INSPECTION - INSPECT (DETAILED) THE ENGINE CONTROL CABLES (EXPOSED) IN THE WING FORWARD OF THE FRONT SPAR.
78-004-01	INSPECT (DETAILED) THE ENGINE TURBINE EXHAUST FIRE SEAL (SEAL SPRINGS, SEAL CARRIER, AND CLAMP STRIP).
78-006-01	DETAILED INSPECTION - INSPECT (DETAILED) THE ENGINE THRUST REVERSER FIRE SEAL.
78-008-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE ENGINE THRUST REVERSER SYNC LOCKS.
78-010-01	FUNCTION CHECK - FUNCTIONALLY CHECK THE ENGINE THRUST REVERSER HYDRAULIC LOCKING ACTUATOR (LOCKING/AUTO RESTOW FUNCTION).
78-012-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE ENGINE THRUST REVERSER CONTROL VALVE MODULE.
79-016-01	DISCARD THE ENGINE OIL SCAVENGE FILTER ELEMENT.
79-020-01	DISCARD THE MAIN ENGINE OIL SUPPLY FILTER ELEMENT.

2C Check Tasks

Task Number	Description
20-046-01	INSPECT (DETAILED) THE GENERATOR POWER FEEDERS AND CONNECTED EWIS ON ENGINE NO. 1. (EZAP)
20-048-01	INSPECT (DETAILED) THE GENERATOR POWER FEEDERS AND CONNECTED EWIS ON ENGINE NO. 2. (EZAP)
20-060-01	INSPECT (DETAILED) THE LANDING GEAR MANUAL EXTENSION CONTROL CABLES (NOT INCLUDING THE CABLES ABOVE THE WHEEL WELL AND CENTER WING SECTION).
21-012-01	GENERAL VISUAL INSPECTION - FUNCTIONALLY CHECK THE CABIN POSITIVE PRESSURE RELIEF VALVES
21-038-01	FUNCTION CHECK - FUNCTIONALLY CHECK THE ELECTRICAL/ELECTRONIC EQUIPMENT COOLING SYSTEM.
23-002-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE PASSENGER ADDRESS SPEAKERS.
23-004-01	FUNCTION CHECK - FUNCTIONALLY CHECK THE RESISTANCE OF STATIC DISCHARGERS.
24-010-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE ENGINE CSD GENERATOR DISCONNECT (WITH ENGINE RUNNING).
24-024-01	FUNCTION CHECK - FUNCTIONALLY CHECK THE STANDBY POWER SYSTEM.
26-006-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE APU REMOTE FIRE DETECTION SYSTEM (FIRE DETECTION MODULE).
26-008-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE APU REMOTE FIRE DETECTION SYSTEM (APU REMOTE FIRE CONTROL PANEL).
27-020-01	DETAILED INSPECTION - INSPECT (DETAILED) THE AILERON BALANCE BAY SEALS.
27-022-01	FUNCTION CHECK - FUNCTIONALLY CHECK THE AILERON TAB FREEPLAY.
27-024-01	FUNCTION CHECK - FUNCTIONALLY CHECK THE AILERON SURFACE FREEPLAY.
27-054-01	FUNCTION CHECK - FUNCTIONALLY CHECK THE RUDDER SURFACE FREEPLAY.
27-062-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE RUDDER POWER CONTROL UNIT FORCE FIGHT MONITOR.
27-084-01	FUNCTIONALLY CHECK THE ELEVATOR TAB FREEPLAY.
27-086-01	FUNCTION CHECK - FUNCTIONALLY CHECK THE ELEVATOR SURFACE FREEPLAY.
27-120-01	DETAILED INSPECTION - INSPECT (DETAILED) THE AFT FLAP DRIVE CABLE RUN.
27-122-01	FUNCTION CHECK - FUNCTIONALLY CHECK THE TRAILING EDGE FLAP ALTERNATE DRIVE SYSTEM.
27-128-01	FUNCTION CHECK THE TRAILING EDGE FLAP LOAD RELIEF SYSTEM.
27-130-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE TRAILING EDGE FLAP CONTROL CABLE TENSION SWITCH.
27-132-01	SERVICE - SERVICE THE TRAILING EDGE FLAP TRANSMISSIONS.
27-136-01	SERVICE - SERVICE THE ALTERNATE TRAILING EDGE FLAP DRIVE UNIT GEARBOX.
27-138-01	LUBRICATE - LUBRICATE THE TRAILING EDGE FLAP POWER UNIT GEARBOX.
27-144-01	LUBRICATE - LUBRICATE THE TRAILING EDGE FLAP LANDING GEAR BEAM ANGLE GEARBOX.
27-146-01	LUBRICATE - LUBRICATE THE TRAILING EDGE FLAP RIGHT ANGLE GEARBOX.
27-168-01	FUNCTION CHECK THE TORQUE OF THE SPOILER RATIO CHANGER NO-BACK ASSEMBLY.
28-002-01	FUNCTIONALLY CHECK THE FUEL SURGE TANK PRESSURE RELIEF VALVES.

2C Check Tasks

28-004-01	INSPECT (DETAILED) THE FUEL SURGE TANK VENT FLAME ARRESTORS FOR CLOGGING, CONDITION AND SECURITY.
29-004-01	DISCARD - DISCARD THE ELECTRIC MOTOR DRIVEN HYDRAULIC PUMP PRESSURE FILTERS.
29-008-01	DISCARD - DISCARD THE ENGINE DRIVEN HYDRAULIC PUMP PRESSURE FILTERS.
29-038-01	DISCARD - DISCARD THE STANDBY HYDRAULIC SYSTEM PRESSURE FILTER.
29-040-01	DISCARD - DISCARD THE STANDBY HYDRAULIC SYSTEM CASE DRAIN FILTER.
29-046-01	DISCARD - DISCARD THE HYDRAULIC POWER TRANSFER UNIT PRESSURE FILTER.
31-008-01	FUNCTION CHECK - FUNCTIONALLY CHECK THE LANDING GEAR WARNING SYSTEM.
32-026-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE LANDING GEAR TRANSFER VALVE.
35-046-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE PASSENGER OXYGEN SYSTEM MANUAL DEPLOYMENT MODE.
35-048-01	FUNCTION CHECK - FUNCTIONALLY CHECK THE PASSENGER OXYGEN SYSTEM AUTOMATIC DEPLOYMENT MODE.
35-050-01	VISUALLY CHECK THE PASSENGER, LAVATORY AND ATTENDANT OXYGEN MASKS FOR CLEANLINESS, CONDITION, AND SECURITY.
35-052-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE PORTABLE OXYGEN CYLINDERS FOR PRESENCE, CONDITION AND SECURITY.
38-008-01	FUNCTION CHECK - FUNCTIONALLY CHECK THE POTABLE WATER TANK PRESSURE RELIEF VALVE.
52-038-01	OPERATIONAL CHECK THE OVER WING EMERGENCY EXIT HATCHES.
52-040-01	INSPECT (GENERAL VISUAL) THE EMERGENCY EXIT HATCH PRESSURE SEAL FOR DEGRADATION.
52-044-01	SNUBBER.
52-072-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE FORWARD ACCESS DOOR PRESSURE SEAL FOR DEGRADATION.
52-300-01	DETAILED INSPECTION - EXTERNAL-DETAILED INSPECTION: INSPECT THE FORWARD AND AFT CARGO DOOR STOP PIN FITTINGS.
52-308-01	DETAILED INSPECTION - EXTERNAL-DETAILED INSPECTION: INSPECT THE ENTRY AND GALLEY SERVICE DOOR STOP PIN FITTINGS.
52-330-01	GENERAL VISUAL INSPECTION EXTERNAL: INSPECT THE FORWARD AIRSTAIR DOOR SKIN, EDGE FRAMES, STOP PIN FITTINGS. DO NOT APPLY PARAGRAPH 6 OF THE BASIC TASK PER MRB D6-82981-MRBR, SECTION 3.F.
53-854-01	ACCOMPLISH - INTERNAL - ZONAL (GV) FORWARD CARGO COMPARTMENT (EZAP)
53-870-01	ACCOMPLISH - INTERNAL - ZONAL (GV) AFT CARGO COMPARTMENT (EZAP)
55-302-01	INTERNAL DETAILED INSPECTION ; INSPECT THE HORIZONTAL STABILIZER CENTER SECTION-TO-HORIZONTAL STABILIZER FRONT AND REAR SPAR ATTACHMENT FITTINGS.
57-320-01	DETAILED INSPECTION - INTERNAL-DETAILED INSPECTION: INSPECT THE MAIN AND AUXILIARY SLAT TRACKS.
57-804-01	ACCOMPLISH - INTERNAL - ZONAL (GV) LEFT WING TIP
57-832-01	ACCOMPLISH - INTERNAL - ZONAL (GV) WING TRAILING EDGE, OUTBOARD FLAP AND SPOILERS - LEFT WING (EZAP)
57-836-01	ACCOMPLISH - INTERNAL - ZONAL (GV) WING FIXED TRAILING EDGE BETWEEN FLAPS - LEFT WING (EZAP)

2C Check Tasks

57-842-01	PERFORM AN INTERNAL ZONAL INSPECTION (GV) OF THE LEFT WING TRAILING EDGE, INBOARD FLAP AND SPOILERS. (EZAP)
57-848-01	ACCOMPLISH - INTERNAL - ZONAL (GV) RIGHT WING TIP
57-876-01	ACCOMPLISH - INTERNAL - ZONAL (GV) WING TRAILING EDGE, OUTBOARD FLAP AND SPOILERS - RIGHT WING (EZAP)
57-880-01	ACCOMPLISH - INTERNAL - ZONAL (GV) WING FIXED TRAILING EDGE BETWEEN FLAPS - RIGHT WING (EZAP)
57-886-01	PERFORM AN INTERNAL ZONAL INSPECTION (GV) OF THE RIGHT WING TRAILING EDGE, INBOARD FLAP AND SPOILERS. (EZAP)
70-822-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) LEFT HAND FAN COWL - ENGINE NO. 1 (INNER AND OUTER EXTERIOR SURFACE)
70-824-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) RIGHT HAND FAN COWL - ENGINE NO. 1 (INNER AND OUTER EXTERIOR SURFACE)
70-834-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) LEFT HAND FAN COWL - ENGINE NO. 2 (INNER AND OUTER EXTERIOR SURFACE)
70-836-01	ACCOMPLISH - EXTERNAL - ZONAL (GV) RIGHT HAND FAN COWL - ENGINE NO. 2 (INNER AND OUTER EXTERIOR SURFACE)
73-008-01	FUNCTION CHECK - FUNCTIONALLY CHECK THE ENGINE FUEL FILTER DIFFERENTIAL PRESSURE SWITCH WARNING SYSTEM.
76-004-01	DETAILED INSPECTION - INSPECT (DETAILED) THE ENGINE CONTROL CABLES (NON-EXPOSED) IN THE WING FORWARD OF THE FRONT SPAR.
79-022-01	FUNCTION CHECK - FUNCTIONALLY CHECK THE MAIN ENGINE OIL FILTER BYPASS PRESSURE DIFFERENTIAL SWITCH.

3C Check Tasks

Task Number	Description
20-034-01	RESTORE (CLEAN) THE AREAS BEHIND THE FORWARD CARGO COMPARTMENT CEILING. (EZAP)
20-038-01	RESTORE (CLEAN) THE AREAS BEHIND THE FORWARD CARGO COMPARTMENT AFT BULKHEAD ACCESS PANELS. (EZAP)
20-040-01	RESTORE (CLEAN) THE AREAS BEHIND THE AFT CARGO COMPARTMENT CEILING. (EZAP)
20-044-01	RESTORE (CLEAN) THE AFT CARGO COMPARTMENT EQUIPMENT BAY. (EZAP)
20-066-01	INSPECT (GENERAL VISUAL) THE EXPOSED EWIS ABOVE THE APU UPPER SHROUD. (EZAP)
21-005-01	DISCARD APU BLEED AIR DUCT FLEXIBLE PRESSURE SEAL
22-002-01	DETAILED INSPECTION - INSPECT (DETAILED) THE AILERON AND ELEVATOR AUTOPILOT SERVO ACTUATOR INPUT LEVER SHEAR RIVETS FOR WEAR.
26-054-01	FUNCTION CHECK THE CARGO FIRE EXTINGUISHING SYSTEM TUBING FOR EVIDENCE OF LEAKAGE OR BLOCKAGE.
27-010-01	FUNCTIONALLY CHECK - THE AILERON PCU INTERNAL HYDRAULIC LEAKAGE IN A LOADED CONDITION.
27-042-01	FUNCTION CHECK - FUNCTIONALLY CHECK THE STANDBY POWER CONTROL UNIT INTERNAL LEAKAGE TO INCLUDE RUDDER IN A LOADED CONDITION.
27-056-01	DETAILED INSPECTION - INSPECT (DETAILED) THE RUDDER DUAL LOAD PATH FEEL AND CENTERING COMMAND AND GROUND PATH COMPONENTS.
27-060-01	DETAILED INSPECTION - INSPECT (DETAILED) THE DUAL LOAD PATH RUDDER PCU INPUT COMPONENTS
27-064-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE RUDDER POWER CONTROL UNIT OVERRIDES.
27-076-01	FUNCTIONALLY CHECK - THE INTERNAL LEAKAGE OF THE ELEVATOR POWER CONTROL UNITS IN A LOADED CONDITION
27-088-01	DETAILED INSPECTION - INSPECT (DETAILED) THE DUAL LOAD PATH ELEVATOR PUSHROD (DOGBONE) AND ATTACH BOLTS.
27-090-01	DETAILED INSPECTION - INSPECT (DETAILED) THE DUAL LOAD PATH FEEL AND CENTERING COMMAND AND GROUND PATH COMPONENTS.
27-140-01	LUBRICATE - LUBRICATE THE TRAILING EDGE FLAP POSITION TRANSMITTER GEARBOX.
27-186-01	FUNCTIONALLY CHECK - FOR INTERNAL LEAKAGE OF THE LEADING EDGE FLAP AND SLAT ACTUATORS.
28-012-01	FUNCTIONALLY CHECK - FUNCTIONALLY CHECK (RESISTANCE MEASUREMENT) FUEL PUMPS BOND RESISTANCE TO STRUCTURE. (SFAR 88)
28-014-01	SHROUD.
28-016-01	FUNCTIONALLY CHECK (RESISTANCE MEASUREMENT) THE APU DC FUEL PUMP MOTOR BONDING STRAP. (SFAR 88)
29-002-01	FUNCTION CHECK - FUNCTIONALLY CHECK THE "A" AND "B" HYDRAULIC SYSTEMS INTERNAL LEAKAGE RATE.
32-034-01	OPERATIONAL CHECK - OPERATIONALLY CHECK THE ALTERNATE BRAKE CONTROL SYSTEM.
52-306-01	GENERAL VISUAL INSPECTION - INTERNAL-GENERAL VISUAL INSPECTION: INSPECT THE FORWARD AND AFT CARGO DOOR INTERNAL STRUCTURE.
52-332-01	GENERAL VISUAL INSPECTION INTERNAL: INSPECT THE FORWARD AIR STAIR DOOR INTERNAL STRUCTURE AND LATCH BRACKETS.
52-338-01	GENERAL VISUAL INSPECTION - INTERNAL-GENERAL VISUAL INSPECTION: INSPECT THE ELECTRICAL/ELECTRONIC ACCESS DOOR INTERNAL STRUCTURE.

3C Check Tasks

52-340-01	GENERAL VISUAL INSPECTION - INTERNAL-GENERAL VISUAL INSPECTION: INSPECT THE FORWARD ACCESS DOOR INTERNAL STRUCTURE.
53-310-01	GENERAL VISUAL INSPECTION INTERNAL: INSPECT THE FUSELAGE LOWER LOBE FORWARD OF THE BILGE FROM BS 178 TO BS 380 BELOW S-17, AND AREA ABOVE THE BILGE BS 380 TO BS 540 FROM S-17 TO S-26 AND BS 727 TO BS 1016 FROM S-17 TO S-25 INCLUDING SKIN PANELS, FRAMES, BULKHEADS, STRINGERS, SHEAR TIES, SKIN CUT OUTS, STRUCTURE AROUND NOSE LANDING GEAR WHEEL WELL, AND MAIN DECK FLOOR STRUCTURE.
53-314-01	GENERAL VISUAL INSPECTION INTERNAL: INSPECT THE BILGE FROM BS 380 TO BS 540 BELOW S-26 AND BS 727 TO BS 1016 BELOW S-25 INCLUDING SKIN PANELS, FRAMES, BULKHEADS, STRINGERS, SHEAR TIES, DOUBLERS, AND SKIN CUT-OUTS. A DUAL COAT OF CORROSION INHIBITOR PER PARAGRAPH 6 OF THE BASIC TASK PER MRB D6-82981-MRBR, SECTION 3.F., IS RECOMMENDED FOR THIS AREA (OPTIONAL).
53-316-01	GENERAL VISUAL INSPECTION INTERNAL: INSPECT THE FUSELAGE WING STRUCTURE UNDER WING-TO-BODY FAIRINGS AND AIR-CONDITIONING ACCESS DOORS INCLUDING SKIN PANELS, SKIN SPLICES AND JOINTS, FRONT SPAR AT BS 540 AND REAR SPAR BULKHEAD AT BS 663.75 INCLUDING WING SPAR TERMINAL FITTINGS AT BBL 70.85, AND OVER AND UNDER WING-TO-BODY SPLICE FITTINGS.
53-320-01	GENERAL VISUAL INSPECTION - INTERNAL-GENERAL VISUAL INSPECTION: INSPECT INTERIOR OF SECTION 48 FROM BS 1016 TO BS 1156 INCLUDING SKINS, FRAMES, DOUBLERS, SHEAR TIES; THE AFT FACE OF THE AFT PRESSURE BULKHEAD, STRINGERS, STRINGER SPLICE FITTINGS, VERTICAL STABILIZER-TO-BODY ATTACH FITTINGS, APU INLET BULKHEAD DUCT AND FRAME, HORIZONTAL STABILIZER CENTER SECTION JACKSCREW FITTING, HINGE PINS AND NUTS, HINGE FITTINGS AND LUGS, AND HORIZONTAL STABILIZER CENTER SECTION TRUSS STRUCTURE.
53-322-01	GENERAL VISUAL INSPECTION INTERNAL: INSPECT INACCESSIBLE AREAS OF THE APU INLET DUCT, FUSELAGE FRAMES, STRINGERS AND CHORDS BEHIND TORQUE BOX WEB FROM BS 1088 TO BS 1156. A DUAL COAT OF CORROSION INHIBITOR PER PARAGRAPH 6 OF THE BASIC TASK PER MRB D6-82981-MRBR, SECTION 3.F., IS RECOMMENDED FOR THE APU INLET BULKHEAD DUCT AND FRAME (OPTIONAL).
53-332-01	DETAILED INSPECTION - INTERNAL-DETAILED INSPECTION: INSPECT THE FORWARD AND AFT CARGO DOOR CUTOUTS.
53-336-01	DETAILED INSPECTION - INTERNAL-DETAILED INSPECTION: INSPECT THE ENTRY AND GALLEY SERVICE DOOR CUTOUTS AND SURROUND STRUCTURE INCLUDING DOOR STOP PAD FITTINGS, LATCHES, AND HINGES.
53-372-01	GENERAL VISUAL INSPECTION - INTERNAL-GENERAL VISUAL INSPECTION: INSPECT THE UPPER AND LOWER SILL BEAMS OF CARGO DOOR OPENINGS.
53-374-01	GENERAL VISUAL INSPECTION INTERNAL: INSPECT THE KEEL BEAM. A DUAL COAT OF CORROSION INHIBITOR PER PARAGRAPH 6 OF THE BASIC TASK PER MRB D6-82981-MRBR, SECTION 3.F., IS RECOMMENDED IN KEEL BEAM AREA (OPTIONAL).
54-304-01	DETAILED INSPECTION NO. 1 ENGINE - INTERNAL-DETAILED INSPECTION: INSPECT THE PYLON FIREWALL INCLUDING MID AND LOWER SPARS AND MID STRUT BULKHEAD, AND ENGINE SUPPORT STRUCTURE INCLUDING FORE AND AFT ENGINE MOUNTS, LINKS, ATTACH FITTINGS, THRUST LINKS, EVENER BAR, AND VIBRATION ISOLATOR

3C Check Tasks

54-304-01	DETAILED INSPECTION NO. 2 ENGINE - INTERNAL-DETAILED INSPECTION: INSPECT THE PYLON FIREWALL INCLUDING MID AND LOWER SPARS AND MID STRUT BULKHEAD, AND ENGINE SUPPORT STRUCTURE INCLUDING FORE AND AFT ENGINE MOUNTS, LINKS, ATTACH FITTINGS, THRUST LINKS, EVENER BAR, AND VIBRATION
54-306-01	DETAILED INSPECTION NO. 1 ENGINE - INTERNAL-DETAILED INSPECTION: INSPECT THE FORWARD ENGINE MOUNT BULKHEAD AT NAC. STA. 196.
54-306-01	DETAILED INSPECTION NO. 2 ENGINE - INTERNAL-DETAILED INSPECTION: INSPECT THE FORWARD ENGINE MOUNT BULKHEAD AT NAC. STA. 196.
54-308-01	SPECIAL DETAILED INSPECTION NO. 1 ENGINE - INTERNAL-SPECIAL DETAILED INSPECTION: INSPECT THE FORWARD AND AFT ENGINE MOUNT CONE BOLTS AND AFT ENGINE MOUNT HANGER BEAM AND TANGENT LINKS IN AREAS OF ATTACHMENTS
54-308-01	SPECIAL DETAILED INSPECTION NO. 2 ENGINE - INTERNAL-SPECIAL DETAILED INSPECTION: INSPECT THE FORWARD AND AFT ENGINE MOUNT CONE BOLTS AND AFT ENGINE MOUNT HANGER BEAM AND TANGENT LINKS IN AREAS OF ATTACHMENTS
54-310-01	DETAILED INSPECTION LEFT - INTERNAL-DETAILED INSPECTION: INSPECT THE UPPER SPAR CROWN CHORD; MID AND LOWER SPARS; BULKHEADS AT NAC. STA. 196, 235, 254 AND 278; MID-SPAR FITTINGS AT WBL 183.4 AND 198.6; AND LOWER SPAR (DIAGONAL BRACE) ATTACH FITTING AT NAC. STA. 278
54-310-01	DETAILED INSPECTION RIGHT - INTERNAL-DETAILED INSPECTION: INSPECT THE UPPER SPAR CROWN CHORD; MID AND LOWER SPARS; BULKHEADS AT NAC. STA. 196, 235, 254 AND 278; MID-SPAR FITTINGS AT WBL 183.4 AND 198.6; AND LOWER SPAR (DIAGONAL BRACE) ATTACH FITTING AT NAC. STA. 278
54-312-01	THE PYLON AFT BULKHEAD AT NAC. STA. 278, DIAGONAL BRACE AND FUSE PINS, AND SIDE BRACE LINKS INCLUDING THE ATTACH FITTINGS TO WING AND PYLON (WITH FUSE PINS INSTALLED).
54-312-01	THE PYLON AFT BULKHEAD AT NAC. STA. 278, DIAGONAL BRACE AND FUSE PINS, AND SIDE BRACE LINKS INCLUDING THE ATTACH FITTINGS TO WING AND PYLON (WITH FUSE PINS INSTALLED).
54-316-01	DETAILED INSPECTION NO. 1 ENGINE - INTERNAL-DETAILED INSPECTION: INSPECT THE PYLON OVERWING ATTACH FITTING COVERED BY THE FAIRING AFT OF THE WING FRONT SPAR AT WBL 191.
54-316-01	DETAILED INSPECTION NO. 2 ENGINE - INTERNAL-DETAILED INSPECTION: INSPECT THE PYLON OVERWING ATTACH FITTING COVERED BY THE FAIRING AFT OF THE WING FRONT SPAR AT WBL 191.
54-318-01	DETAILED INSPECTION NO. 1 ENGINE - INTERNAL-DETAILED INSPECTION: INSPECT THE PYLON SKIN NORMALLY COVERED BY THE THRUST REVERSER AND THRUST REVERSER/STRUT FAIRINGS.
54-318-01	DETAILED INSPECTION NO. 2 ENGINE - INTERNAL-DETAILED INSPECTION: INSPECT THE PYLON SKIN NORMALLY COVERED BY THE THRUST REVERSER AND THRUST REVERSER/STRUT FAIRINGS.
54-320-01	GENERAL VISUAL INSPECTION NO. 1 ENGINE - EXTERNAL-GENERAL VISUAL INSPECTION: INSPECT THE ENGINE STRUTS (PYLONS) INCLUDING SKINS, SPARS, STRUTS, BRACES, LINKS, ATTACH FITTINGS (INCLUDING WING ATTACH FITTINGS), LUGS, PINS AND ENGINE COWLINGS.
54-320-01	GENERAL VISUAL INSPECTION NO. 2 ENGINE -GENERAL VISUAL INSPECTION: INSPECT THE ENGINE STRUTS (PYLONS) INCLUDING SKINS, SPARS, STRUTS, BRACES, LINKS, ATTACH FITTINGS (INCLUDING WING ATTACH FITTINGS), LUGS, PINS AND ENGINE COWLINGS.

3C Check Tasks

57-300-01	GENERAL VISUAL INSPECTION INTERNAL: INSPECT THE INTERIOR OF WING CENTER SECTION INCLUDING SKINS, STRINGERS, SPAN WISE BEAMS, FRONT AND REAR SPAR CHORDS AND WEBS. (1) DO NOT APPLY PARAGRAPH 6 OF THE BASIC TASK PER MRB D6-82981-MRBR, SECTION 3.F. (2) ROUTINE SUMPING PLUS BIOCIDES PROGRAM TO CONTROL MICROBIAL CORROSION IS RECOMMENDED (OPTIONAL).
57-306-01	GENERAL VISUAL INSPECTION - EXTERNAL-GENERAL VISUAL INSPECTION: INSPECT THE EXTERIOR WING SURFACES FROM WING-TO-BODY FAIRINGS TO WING TIP INCLUDING UPPER AND LOWER IN-SPAR SKINS AND FASTENERS, AND LEADING AND TRAILING EDGE STRUCTURE.
57-310-01	INTERNAL GENERAL VISUAL INSPECTION INSPECT THE WING TRAILING EDGE CAVITY INCLUDING ALL FIXED TRAILING EDGE STRUCTURE, REAR SPAR, MAIN LANDING GEAR SUPPORT STRUCTURE, SKINS, RIBS, AILERONS, SPOILERS, FLAPS, INTERIOR STRUCTURE OF THE MID FLAP, FLAP TRACK CARRIAGES AND CARRIAGE SPINDLES AND FLAP TRACK CARRIAGE RETAINER BOLTS AND THRUST BEARING RETENTION BOLTS.
57-314-01	GENERAL VISUAL INSPECTION - INTERNAL-GENERAL VISUAL INSPECTION: INSPECT THE WING LEADING EDGE CAVITY INCLUDING FRONT SPAR CHORDS AND WEB, FLAPS, SLATS, SKINS, ENGINE PYLON ATTACHMENTS AND SUPPORT FITTINGS AND SLAT SUPPORT RIBS.
57-336-01	GENERAL VISUAL INSPECTION - INTERNAL-GENERAL VISUAL INSPECTION: INSPECT THE FLAP TRACK ATTACHMENT TO FLAP TRANSMISSION.

4C Check Tasks

Task Number	Description
20-012-01	RESTORE (CLEAN) THE LOWER AREAS BEHIND THE FORWARD PASSENGER CABIN SIDEWALLS. (EZAP)
20-014-01	INSPECT (DETAILED) THE POWER FEEDERS AND CONNECTED EWIS IN THE FORWARD MAIN CABIN CEILING. (EZAP)
20-016-01	SIDEWALLS. (EZAP)
20-018-01	INSPECT (DETAILED) THE POWER FEEDERS AND CONNECTED EWIS IN THE AFT MAIN CABIN CEILING. (EZAP)
20-028-01	RESTORE (CLEAN) THE ELECTRONIC COMPARTMENT. (EZAP)
20-030-01	INSPECT (DETAILED) THE EWIS BEHIND THE ELECTRONIC EQUIPMENT RACKS. (EZAP)
20-032-01	RESTORE (CLEAN) THE FORWARD AIRSTAIR COMPARTMENT. (EZAP)
20-035-01	INSPECT (DETAILED) AC GENERATOR POWER FEEDERS AND CONNECTED EWIS BEHIND THE CEILING PANELS IN FORWARD CARGO COMPARTMENT. (EZAP)
20-054-01	INSPECT (DETAILED) THE CONTROL CABLES IN THE FUSELAGE AND EMPENNAGE (NOT INCLUDING THE CABLES ABOVE THE WHEEL WELL AND CENTER WING SECTION).
20-076-01	INSPECT (GENERAL VISUAL) THE NO. 1 ENGINE POWER FEEDERS AND CONNECTED EWIS IN THE STRUT TORQUE BOX. (EZAP)
20-078-01	INSPECT (GENERAL VISUAL) THE NO. 2 ENGINE POWER FEEDERS AND CONNECTED EWIS IN THE STRUT TORQUE BOX. (EZAP)
27-126-01	FUNCTION CHECK - FUNCTIONALLY CHECK THE TRAILING EDGE FLAP BALLSCREW ACTUATOR BACKLASH.
27-148-01	LUBRICATE - LUBRICATE THE TRAILING EDGE FLAP DRIVE TORQUE TUBE COUPLINGS.
29-032-01	DISCARD - DISCARD THE HYDRAULIC RESERVOIR FILL FILTER.
29-034-01	FUNCTION CHECK - FUNCTIONALLY CHECK THE STANDBY HYDRAULIC SYSTEM INTERNAL LEAKAGE RATE.
32-060-01	RESTORE - RESTORE THE LANDING GEAR CONTROL LEVER POSITION SWITCH BY CLEANING.
36-002-01 (001.1)	FUNCTION CHECK LEFT (OFF-AIRPLANE) THE PRE-COOLER CONTROL VALVE AND WING TAI SOLENOID.
36-002-01 (002.1)	FUNCTION CHECK RIGHT (OFF-AIRPLANE) THE PRE-COOLER CONTROL VALVE AND WING TAI SOLENOID.
36-004-01 (001.1)	FUNCTION CHECK LEFT FUNCTIONALLY CHECK (OFF-AIRPLANE) THE PRE-COOLER CONTROL VALVE SENSOR.
36-004-01 (002.1)	FUNCTION CHECK RIGHT FUNCTIONALLY CHECK (OFF-AIRPLANE) THE PRE-COOLER CONTROL VALVE SENSOR.
38-004-01	DISCARD - DISCARD THE POTABLE WATER BLEED AIR IN-LINE FILTER.
38-006-01	DISCARD - DISCARD THE POTABLE WATER AIR COMPRESSOR INLET FILTER.
49-018-01	LUBRICATE - LUBRICATE THE APU INLET DOOR VORTEX GENERATOR HINGE PIN.
52-302-01	DETAILED INSPECTION - INTERNAL-DETAILED INSPECTION: INSPECT THE FORWARD AND AFT CARGO DOOR STOP PIN FITTINGS
52-312-01	GENERAL VISUAL INSPECTION - INTERNAL-GENERAL VISUAL INSPECTION: INSPECT ENTRY AND GALLEY SERVICE DOOR INTERNAL STRUCTURE.
52-324-01	GENERAL VISUAL INSPECTION - INTERNAL-GENERAL VISUAL INSPECTION: INSPECT THE OVER WING ESCAPE HATCH INTERNAL STRUCTURE.
52-822-01	EXIT HATCH.
52-826-01	PERFORM AN INTERNAL ZONAL INSPECTION (GV) OF THE RIGHT EMERGENCY EXIT HATCH.
52-830-01	ACCOMPLISH AN INTERNAL ZONAL INSPECTION (GV) OF THE LEFT EMERGENCY EXIT HATCH.

4C Check Tasks

52-838-01	PERFORM AN INTERNAL ZONAL INSPECTION (GV) OF THE LEFT EMERGENCY EXIT HATCH.
53-302-01	GENERAL VISUAL INSPECTION INTERNAL: INSPECT THE FLIGHT CREW COMPARTMENT FROM BS 178 TO BS 270 INCLUDING SKINS, FRAMES, STRINGERS, DOUBLERS, SHEAR TIES, WINDOW CUT OUTS, AFT FACE OF THE FORWARD PRESSURE BULKHEAD, AND FLOOR. DO NOT APPLY PARAGRAPH 6 OF THE BASIC TASK PER MRB D6-82981-MRBR, SECTION 3.F.
53-304-01	GENERAL VISUAL INSPECTION - INTERNAL-GENERAL VISUAL INSPECTION: INSPECT THE INTERIOR OF FUSELAGE UPPER LOBE FROM BS 270 TO BS 1016 ABOVE S-17 INCLUDING SKIN PANELS, FRAMES, STRINGERS, DOUBLERS, SHEAR TIES, WINDOW CUT-OUTS, AND FORWARD FACE OF THE AFT PRESSURE BULKHEAD AND PRESSURE
53-340-01	GENERAL VISUAL INSPECTION - EXTERNAL-GENERAL VISUAL INSPECTION: INSPECT THE OVERWING ESCAPE HATCH CUTOUTS AND DOOR STOP PAD FITTINGS
53-346-01	GENERAL VISUAL INSPECTION - INTERNAL-GENERAL VISUAL INSPECTION: INSPECT THE WING-TO-BODY DRAG ANGLES
53-350-01	GENERAL VISUAL INSPECTION - INTERNAL-GENERAL VISUAL INSPECTION: INSPECT STRINGER 18A WEB, CHORD, AND LINKS.
53-804-01	ACCOMPLISH - INTERNAL - ZONAL (GV) FLIGHT CONTROL CABIN (WITH ACCESS PROVIDED) (EZAP)
53-814-01	ACCOMPLISH - INTERNAL - ZONAL (GV) FORWARD HALF OF CABIN - AFT OF CONTROL CABIN TO BS 627.5 INCLUDING: AREA ABOVE CENTER SECTION WING BOX (EZAP)
53-820-01	ACCOMPLISH - INTERNAL - ZONAL (GV) AFT HALF OF CABIN - BS 627.5 TO AFT BULKHEAD INCLUDING: AREA ABOVE CENTER SECTION WING BOX AND PRESSURE DECK ABOVE MAIN LANDING GEAR WHEEL WELL (EZAP)
53-878-01	ACCOMPLISH - INTERNAL - ZONAL (GV) FORWARD WING-TO-BODY FAIRING - LEFT (EZAP)
53-880-01	ACCOMPLISH - INTERNAL - ZONAL (GV) FORWARD WING-TO-BODY FAIRING - RIGHT (EZAP)
53-882-01	ACCOMPLISH - INTERNAL - ZONAL (GV) AFT WING-TO-BODY FAIRING - LEFT (EZAP)
53-884-01	ACCOMPLISH - INTERNAL - ZONAL (GV) AFT WING-TO-BODY FAIRING - RIGHT (EZAP)
55-300-01	DETAILED INSPECTION - INTERNAL-DETAILED INSPECTION: INSPECT THE FUSELAGE TO VERTICAL STABILIZER FRONT AND REAR SPAR ATTACHMENT FITTINGS
55-302-01	INTERNAL DETAILED INSPECTION ; INSPECT THE HORIZONTAL STABILIZER CENTER SECTION-TO-HORIZONTAL STABILIZER FRONT AND REAR SPAR ATTACHMENT FITTINGS.
55-304-01	GENERAL VISUAL INSPECTION - INTERNAL-GENERAL VISUAL INSPECTION: INSPECT THE HORIZONTAL STABILIZER MAIN BOX, INCLUDING SKINS, RIBS AND STIFFENERS, FRONT SPAR CHORDS AND WEB, AND REAR SPAR CHORDS AND WEB.
55-310-01	GENERAL VISUAL INSPECTION - INTERNAL-GENERAL VISUAL INSPECTION: INSPECT THE STABILIZER TRAILING EDGE CAVITY, INCLUDING BALANCE PANELS AND WEIGHTS, RIBS, ELEVATOR ATTACH POINTS, ELEVATOR REAR SPAR AT TRIM TAB BAY, REAR SPAR CHORDS AND WEB AND TRAILING EDGE BEAMS.
55-316-01	GENERAL VISUAL INSPECTION - INTERNAL-GENERAL VISUAL INSPECTION: INSPECT THE HORIZONTAL STABILIZER LEADING EDGE INCLUDING RIBS, LEADING EDGE SKINS, AND FRONT SPAR CHORDS AND WEB.

4C Check Tasks

55-318-01	GENERAL VISUAL INSPECTION - INTERNAL GENERAL VISUAL INSPECTION: INSPECT THE VERTICAL STABILIZER MAIN BOX INCLUDING FRONT SPAR CHORDS AND WEB, SKINS, STRINGERS, RIBS AND STIFFENERS, REAR SPAR CHORDS AND WEB.
55-322-01	GENERAL VISUAL INSPECTION - INTERNAL -GENERAL VISUAL INSPECTION: INSPECT THE VERTICAL STABILIZER TRAILING EDGE CAVITY INCLUDING TRAILING EDGE PANELS, RIBS, RUDDER ATTACH POINTS, AND VERTICAL STABILIZER REAR SPAR CHORDS AND WEB.
55-324-01	GENERAL VISUAL INSPECTION - INTERNAL -GENERAL VISUAL INSPECTION: INSPECT THE VERTICAL STABILIZER LEADING EDGE INCLUDING FRONT SPAR CHORDS AND WEB, RIBS AND LEADING EDGE SKINS.

5C Check Tasks

Task Number	Description
20-002-01	RESTORE (CLEAN) THE AREAS BEHIND THE RUDDER PEDALS AND CENTER CONSOLE (REMOVAL OF FLIGHT CONTROL PANELS/CONSOLES IS NOT REQUIRED). (EZAP)
20-004-01	RESTORE (CLEAN) THE AREAS UNDER THE RACEWAY COVER PLATES ON BOTH SIDES OF THE FLIGHT COMPARTMENT. (EZAP)
20-006-01	RESTORE (CLEAN) THE AREAS IN THE P6 AND P18 PANELS. (EZAP)
20-008-01	INSPECT (DETAILED) THE WIRE BUNDLES AND CONNECTED EWIS IN THE P6 AND P18 PANELS. (EZAP)
20-024-01	RESTORE (CLEAN) THE AREA OF THE LOWER NOSE COMPARTMENT. (EZAP)
20-026-01	INSPECT (DETAILED) THE POWER FEEDERS AND CONNECTED EWIS IN THE LOWER NOSE COMPARTMENT. (EZAP)
20-068-01	INSPECT (GENERAL VISUAL) EWIS LOCATED IN THE DENSER AREAS OF THE LEFT WING LEADING EDGE FROM WSTA 253 TO WSTA 500. (EZAP)
20-070-01	INSPECT (GENERAL VISUAL) EWIS LOCATED IN THE DENSER AREAS OF THE RIGHT WING LEADING EDGE FROM WSTA 253 TO WSTA 500. (EZAP)
21-016-01	FUNCTION CHECK - FUNCTIONALLY CHECK THE CABIN NEGATIVE PRESSURE RELIEF VENT DOOR
25-034-01	DETAILED INSPECTION - INSPECT (DETAILED) THE FLIGHT COMPARTMENT EMERGENCY ESCAPE LANYARDS FOR CONDITION AND SECURITY.
53-876-01	ACCOMPLISH - INTERNAL - ZONAL (GV) CENTER SECTION FUEL TANK (EZAP)
57-302-01	INTERNAL GENERAL VISUAL INSPECTION INTERNAL-GENERAL VISUAL INSPECTION: INSPECT THE INTERIOR OF OUTBOARD MAIN WING BOX INCLUDING SKINS, STRINGERS, RIBS, FRONT AND REAR SPAR CHORDS AND WEBS, LOWER SKIN AT FUEL TANK AND BOOST PUMP ACCESS DOORS. (1) DO NOT APPLY PARAGRAPH 6 OF THE BASIC TASK PER MRB D6-82981-MRBR, SECTION 3.F. (2) ROUTINE SUMPING PLUS BIOCIDES PROGRAM TO CONTROL MICROBIAL CORROSION IS RECOMMENDED (OPTIONAL).
57-304-01	OF INBOARD MAIN WING BOX STRINGER END FITTINGS AND FUEL TANK DRAIN TUBES AT WBL 70.5.
57-816-01	ACCOMPLISH - INTERNAL - ZONAL (GV) FUEL VENT SURGE TANK - LEFT WING
57-820-01	ACCOMPLISH - INTERNAL - ZONAL (GV) MAIN FUEL TANK - LEFT WING (EZAP)
57-826-01	ACCOMPLISH - INTERNAL - ZONAL (GV) WING TRAILING EDGE, AILERON AND CONTROL TAB - LEFT WING
57-860-01	ACCOMPLISH - INTERNAL - ZONAL (GV) FUEL VENT SURGE TANK - RIGHT WING
57-864-01	ACCOMPLISH - INTERNAL - ZONAL (GV) MAIN FUEL TANK - RIGHT WING (EZAP)
57-870-01	ACCOMPLISH - INTERNAL - ZONAL (GV) WING TRAILING EDGE, AILERON AND CONTROL TAB - RIGHT WING

6C Check Tasks

Task Number	Description
20-036-01	RESTORE (CLEAN) THE AREAS BEHIND THE FORWARD CARGO COMPARTMENT SIDEWALL PANELS. (EZAP)
20-037-01	INSPECT (DETAILED) AC GENERATOR POWER FEEDERS AND CONNECTED EWIS BEHIND THE SIDEWALL PANELS IN FORWARD CARGO COMPARTMENT. (EZAP)
20-042-01	RESTORE (CLEAN) THE AREAS BEHIND THE AFT CARGO COMPARTMENT SIDEWALL PANELS. (EZAP)
20-056-01	INSPECT (DETAILED) THE CONTROL CABLES ABOVE THE WHEEL WELL AND CENTER WING SECTION.
20-062-01	INSPECT (DETAILED) THE LANDING GEAR MANUAL EXTENSION CONTROL CABLES ABOVE THE WHEEL WELL AND CENTER WING SECTION.
27-162-01	GENERAL VISUAL INSPECTION - INSPECT (GENERAL VISUAL) THE TRAILING EDGE FLAP CONTROL VALVE TOWER SHAFT.
28-003-01	FUNCTIONALLY CHECK - FUNCTIONALLY CHECK (RESISTANCE MEASUREMENT) THE BONDING RESISTANCE BETWEEN THE PRESSURE RELIEF VALVE AND THE STRUCTURE. (SFAR 88)
28-005-01	FUNCTIONALLY CHECK - FUNCTIONALLY CHECK (RESISTANCE MEASUREMENT) THE BONDING BETWEEN THE LOWER AIR VENT STACK AND THE DOOR STRUCTURE. (SFAR 88)
28-008-01	INSPECT (DETAILED) IN TANK TUBING AND EQUIPMENT STATIC BONDING STRAPS AND CLAMPS FOR CONDITION, SECURITY AND OTHER DEGRADATION. (SFAR 88)
28-020-01	INSPECT (DETAILED) THE IN-TANK FQIS EXPOSED ELECTRICAL WIRING INTERCONNECTION SYSTEM (EWIS) AND EWIS SUPPORT FOR DAMAGE, ADEQUATE SEPARATION FROM STRUCTURE AND PROPER SECURITY. (SFAR 88) (EZAP)
28-025-01	DETAILED INSPECTION - INSPECT (DETAILED) IN-TANK FQIS COMPONENTS FOR CHAFING, RUBBING, ADEQUATE SEPARATION FROM THE STRUCTURE AND CONDITION / SECURITY. (SFAR 88)
28-030-01	FUNCTIONALLY CHECK - FUNCTIONALLY CHECK (RESISTANCE MEASUREMENT) THE BONDING BETWEEN THE OVERWING FILLER AND THE STRUCTURE. (SFAR 88)
28-035-01	FUNCTIONALLY CHECK - FUNCTIONALLY CHECK (RESISTANCE MEASUREMENT) THE BONDING RESISTANCE BETWEEN THE HYDRAULIC LINE FITTING AT THE FUEL TANK WALL PENETRATIONS AND THE ADJOINING STRUCTURE. (SFAR 88)
28-045-01	FUNCTIONALLY CHECK - FUNCTIONALLY CHECK (RESISTANCE MEASUREMENT) THE BONDING OF FUELING SHUTOFF SOLENOID VALVES TO ADJOINING STRUCTURE. (SFAR 88)
28-050-01	BONDING RESISTANCE BETWEEN THE FUELING RECEPTACLE (MANIFOLD) AND THE STRUCTURE. (SFAR 88)
28-055-01	FUNCTIONALLY CHECK (RESISTANCE MEASUREMENT) THE BONDING RESISTANCE BETWEEN THE APU SHUTOFF VALVE ACTUATOR AND THE ADJOINING STRUCTURE. (SFAR 88)
28-060-01	FUNCTIONALLY CHECK - FUNCTIONALLY CHECK (RESISTANCE MEASUREMENT) MOTOR OPERATED VALVE BOND RESISTANCE TO STRUCTURE. (SFAR 88)
28-065-01	FUNCTIONALLY CHECK - FUNCTIONALLY CHECK (RESISTANCE MEASUREMENT) THE BONDING BETWEEN THE CENTER/AUXILIARY TANK BOOST PUMP MOTOR HOUSING AND STRUCTURE. (SFAR 88)
28-070-01	FUNCTIONALLY CHECK (RESISTANCE MEASUREMENT) OUT TANK FQIS WIRE BUNDLE LIGHTNING SHIELD TO GROUND TERMINATION. (SFAR 88)
53-856-01	ACCOMPLISH - INTERNAL - ZONAL (GV) FORWARD CARGO COMPARTMENT (EZAP)
53-872-01	ACCOMPLISH - INTERNAL - ZONAL (GV) AFT CARGO COMPARTMENT (EZAP)

6C Check Tasks

54-322-01	DETAILED INSPECTION - INTERNAL -DETAILED INSPECTION: INSPECT THE STRUT-TO-WING ATTACH FITTINGS INCLUDING WING FITTINGS AND EXPOSED SKIN WITH THE PYLONS REMOVED.
55-806-01	ACCOMPLISH - INTERNAL - ZONAL (GV) VERTICAL STABILIZER LEADING EDGE